



The Automated Adjustment function nulls out any influence of the rail and mounting hardware located in the area of the sensor. Run the Automated Adjustment process after installation and after making physical changes to wheel sensor alignment. Tie plates, track spikes, rail anchors, rail clips – and similar hardware – used in the area under the wheel sensor does not interfere with the operation. Run the Auto Adjustment function after removing or adding metal hardware in the vicinity of the wheel sensors.