

MORGAN CITY RENTAL

6" DIESEL PUMP OPERATING INSTRUCTIONS



1. ENSURE THE PUMP IS SECURED ON LOCATION AND LEVEL
2. CHECK ENGINE & OIL COOLANT LEVEL IN ENGINE
3. CONNECT SUCTION HOSE – MAKE SURE HAMMER UNION IS TIGHT OR THE PUMP WILL NOT PRIME
4. FILL PUMP HOUSING WITH WATER FROM DISCHARGE SIDE
5. CONNECT THE DISCHARGE HOSE.
6. START ENGINE, TURN THE START SWITCH AND HOLD THE BYPASS BUTTON UNTIL OIL PRESSURE IS ABOVE 30 PSI – RUN ENGINE AT HALF THROTTLE UNTIL PUMP IS PRIMED

EXCEPTION: IF YOU ARE TRYING TO LIFT 15' OR MORE, THEN THE ENGINE MUST BE AT HIGHER RPM'S TO PRIME.

**IF THERE ANY MALFUNCTIONS OR QUESTIONS PLEASE
CONTACT MORGAN CITY RENTALS 985-384-2004**

