

Control Panel



On / Off Switch
(hold for approx. 3 seconds)

To adjust Interval, Ball speed,
Spin and Elevation.
Once pressed: move through
menu items using UP and DOWN
arrows, and adjust the settings by
using LEFT and RIGHT arrows.
Clock Menu Again once finished.

By pressing OK: you can edit or
add in Random setting.

```
ADJUST  < 14 >
RANDOM   < OFF >
<Back
```

Press to start the balls feeding
and press again to stop

Horizontal Angle

You can vary the *horizontal* angle that balls are ejected to by pressing
the LEFT and RIGHT buttons. Note, you can only adjust the
horizontal angle when the menu is not flashing.



Program buttons
(advanced users –
see page 2,3)

Must be down to the left:
Internal Battery.

INTERVAL: how often a ball is ejected from machine.

THE LOWER THE VALUE THE LESS BALLS PER MINUTE

If you select RANDOM an R will appear and the setting will vary
+/- 0.5seconds

BALL SPEED: speed of ball. 20mph to 130mph. Value of) is 20-32mph.

If you select RANDOM an R will appear and the setting will vary +/- 1

SPIN: Topspin or slice. -ve is slice, +ve is top spin

If you select RANDOM an R will appear and the setting will vary +/- 1

ELEVATION: press UP or DOWN, or can use MENU button

Advanced:

VERTICAL RANDOM:

Random

Advanced Random

OFF



Note these random modes can be used at the same time as horizontal random and the two line drill.

Random: the machine will alternate between short and deep shots at two different elevation levels. The height adjusts by approximately 4 degrees (20 units), randomly deciding when to fire a higher (deeper) or lower (shorter) ball. For example, you might receive three deep balls, followed by two short ones, then one deep ball, and so on. The sequence is entirely random.

To use this feature effectively, first set your machine to fire short balls (e.g., to the service line), then activate Vertical Random. The machine will then alternate between the original short depth and deeper positions.

Advanced Random This mode uses an intelligent algorithm to vary the elevation based on your selected speed and spin settings. Ball speed & spin affects court coverage differently:

- Slower balls require greater elevation angles to achieve the same court depth as faster balls
- Faster balls need less elevation to reach the same areas of the court
- Top spin creates a greater 'curve' trajectory whereas slice or negative spin will make balls float more.

The machine adjusts these parameters automatically to maintain consistent court coverage regardless of speed or spin settings.

For optimal experience, use speeds between 11-15 with Top Spin settings of 4-8. While the machine supports speeds from 7-20 and all spin levels, these recommended settings provide ideal court coverage. The Random Speed and Random Spin options can also be used effectively in this mode.

To disable vertical randomization at any time, select the OFF option.

HORIZONTAL RANDOM:

Narrow

Medium

Wide

OFF

Press OK to make your selection and this will be confirmed by the word ON next to your selection. This random setting fires balls randomly within the horizontal width you choose, where narrow is the easiest (a short step side to side) and wide is the most difficult (full width of the singles court). You can also combine this with other random settings for more challenging practice. You can turn off this random setting by pressing off or activating a competing setting such as the 2 line drill or moving left or right. To exit this menu, press OK or back or press the MENU button.

To achieve **totally random deliveries** of varying depths and widths, simply activate both the HORIZONTAL and VERTICAL random settings one after the other. It does not matter which order you choose. You can also randomize speed, spin and interval as described above (an "R" will appear next to the value to confirm it is active).

Advanced (cont):

DRILLS:

Narrow
Medium
Wide
OFF

Once pressed, you will enter a menu where you can select narrow, medium, wide, off or back. Press OK to make your selection and this will be confirmed by the word ON next to your selection. This setting fires balls alternately to the forehand and backhand at the set width chosen. Narrow is the easiest (a short step side to side) and wide is the most difficult (full width of the singles court).

You can also combine this with other random settings for more challenging practice. You can turn off this setting by pressing off or activating a competing setting such as the horizontal random or moving left or right. To exit this menu, press OK or back or press the MENU button.

Remote Control



Feed	Feed on/off
Sleep	Sleep mode on/off to conserve battery while collecting balls. You will hear a 1 second beep when the machine enters sleep mode, a fast double beep when exiting and a beep every 30 seconds while it's sleeping. You may also press the feed button to exit sleep mode. You can replace the sleep function with the Single Ball Fire (SBF) function if you prefer (see below for more details).
Up	Elevation Up*
Down	Elevation Down* *The elevation can only be adjusted in increments of 2-5 units, depending on how fast you press the button (use the control panel if you want finer control).
Left	Swivel Left
Right	Swivel Right
Reset	Cancels random settings (horizontal, vertical, 2 line drill & random speed, spin & interval) and returns the horizontal alignment to the center.
Interval	Increase or decrease the frequency of deliveries
Speed	Increase or decrease the speed of deliveries
Spin	Increase or decrease the spin level
Horizontal	Horizontal Random (1 = narrow, 2 = medium, 3 = wide, 4 = off). You can also turn on vertical random or advanced random (both will be turned on) to achieve random depth too.
Vertical	Vertical Random (1 = random, 2 = advanced random, 3 = off). These can be activated at the same time as horizontal random or the 2 line drill.
Drill	2 Line Drill (1 = narrow, 2 = medium, 3 = wide, 4 = off). You can also turn on vertical random or advanced random (both will be turned on) to achieve random depth too.

For more information:


[Spinfire Pro 2 Ball Machine | SpinfireSport.com](https://www.spinfiresport.com/product/spinfire-pro-2-ball-machine/)

<https://www.spinfiresport.com/product/spinfire-pro-2-ball-machine/>

App



Spinfire Sport Sports

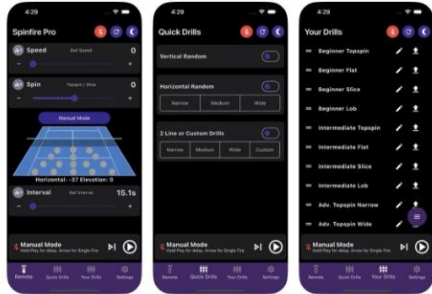

Download from App Store or Google Play: Can do everything remote can do but can also create all your favourite drills so you can set them up ahead and call on them each time. You can also hook it up to your apple watch.


Also have a look at this guide for the app:

[Spinfire App Guide | SpinfireSport.com](https://www.spinfiresport.com/spinfire-app-guide/)

<https://www.spinfiresport.com/spinfire-app-guide/>

Quick Drills

Here you'll find a quick way to jump into simple drills with toggles for *Vertical Random*, *Horizontal Random* and *2 Line or Custom Drills*. Switch back to the Remote page as needed to randomize or fine tune specific settings.

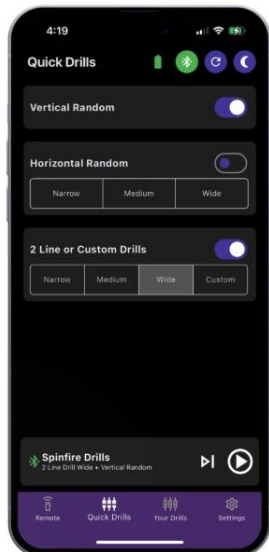


Your Drills

This page is the powerful and personalized hub of the app. Here you can create and save custom drills, bulk edit, duplicate and adjust multiple custom shots and create drills with a prompt using our AI Drill Creator.

When first navigating to this page, you will notice some pre-loaded custom drills. These can be reordered, edited and sent to your machine for play.

Organise and Edit Your Drills

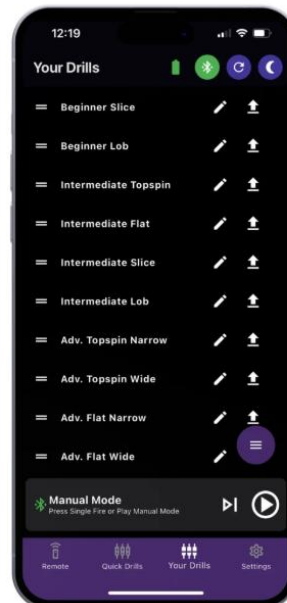

Drag and Drop

Drag and drop to reorder your drills

Edit Drill

Click to edit, change the name, Modify All Shots, delete, duplicate, modify and feed shots

Send Drill

Send drill to machine