

Product Highlight

CCTV Camera Tester for IP Digital/HD Coax/Analog Systems

SecuriTEST IP



How it works:



Connect Camera

Connect camera to the tester using RJ-45, BNC or Wi-Fi



Power Camera

Power the camera using: PoE+ (tester battery or network pass through), 12V DC power (tester battery).



Camera Setup

Comprehensive setup options including aim, focus, PTZ presets, network setting (IP), video settings.



Document

Create PDF installation reports with video images, statistics and camera settings.

Contact us for more information
or a demo:

Southern CA/AZ: 800.659.3655

Northern CA: 866.227.7699

Email: marketing@arrowwire.com

