


# WAG'N TAILS WINTERIZATION PROCEDURE

## SCAN QR CODE TO SEE WINTERIZATION VIDEO

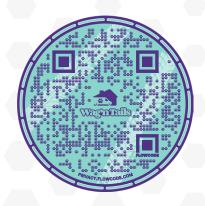

- Check propane level and fill as necessary, never let 1. it go below 1/3 of a tank.
- 2. Plug shore power cord into a dedicated 20-amp receptacle if possible. A 15-amp circuit is acceptable provided nothing else is on that circuit.
- Place a good quality 1500-watt ceramic heater in the utility area of vehicle. 3. A model with a fan is preferred.
- Plug ceramic heater into receptacle labeled "Back Plug" or "Rear Plug" in 4. utility area.
- Prop open laundry chute door to allow heat to enter salon area. 5.
- Leave propane water heater on all night. 6.
- Set salon furnace thermostat at 50 degrees, lowest setting as a backup system. 7.
- Fill fresh water tank. 8.
- 9. Drain gray water tank.

If you have any questions, please contact Customer Care at 800-513-0304.





## WINTERIZATION CONTINUED

### **How To Operate Your Optional Anti-Freeze System**

### TO WINTERIZE SYSTEM:

First make sure the fresh water pump switch is off. Fill the antifreeze tank with non-toxic antifreeze. This tank takes 2 gallons of antifreeze. Do not overfill.

- 1. Always keep your vehicle heated during the winter months. Follow instructions in your owner's manual.
- Empty super sudser by opening sudser drain, turn on pump switch and depress sprayer.
   Be sure to do this until all the water is out of the system. Turn the pump switch off.
- 3. Move bypass valve to bypass and winterize valve to winterize.
- 4. Turn on the fresh water pump switch.
- 5. Turn hot/cold mixer valve to cold position. This is 1 or 2 o' clock on the dial.
- 6. Spray fresh water sprayer down tub drain until pink antifreeze appears.
- 7. Turn on the super sudser pump switch. Spray antifreeze from fresh water sprayer into sudser drain and at the same time depress sudser sprayer until pink antifreeze appears.
- 8. Turn off fresh & sudser pump switches.
- 9. Turn on the tank water heater switch.

Your water lines, pumps and mixer valve are now winterized.

(Not all lines are protected including freshwater tank and water heater)

### TO DE-WINTERIZE SYSTEM:

- 1. Move winterize valve to normal position. Leave bypass valve in bypass position.
- 2. Turn on the fresh water pump switch.
- 3. Turn on mixer valve to cold position. This is 1 or 2 o' clock on the dial.
- 4. Depress fresh water sprayer until clear water appears.
- 5. Turn on super sudser switch. Spray fresh water down the sudser drain while running sudser sprayer. This will flush antifreeze out of sudser lines.
- 6. Move bypass valve to normal position. Spray fresh water for 30 seconds the system is now de-winterized.
- 7. Turn off the tank heater switch.

