## Answer Discorrect

A faulty TP sensor can cause hesitation during acceleration