



IQ Designer Lesson
Follow along with our videos on
12/13/2021 or 11/1/2022
Solaris Instructions:
Hexagon Table Mat



You will need:

- 15" x 15" fabric for center (In kit)
- 22" x WOF" fabric for border (In kit)
- 22" x 22" batting
- 22" x 22" No Show Stabilizer
- Exquisite Thread one shade darker or matching thread

Hooping Order:

- No Show Stabilizer on bottom
- 22" x 22" Cotton batting centered in the hoop
- 15" x 15" Fabric for the center

IQ Designer:

1. Shapes
2. Hexagon
3. OK
4. Size
5. Use the button that keeps it in proportion
4 Arrows pointing out
6. Size 10.25" x 11.87"
7. OK
8. Line Properties
9. Straight Stitch
10. Green

11. OK
12. Line Bucket
13. Touch the line to turn it green
14. Next
15. Memory
16. Save on the machine
17. Set
18. OK
19. Add
20. IQ Designer
21. Pocket with arrow pointing out
22. Select the green hexagon
23. OK
24. Line Properties
25. No Sew
26. OK
27. Line Bucket
28. Touch the line to apply the No Sew
29. Fill Properties
30. Circles
31. Select
32. 013
33. OK
34. Red
35. OK
36. Fill Bucket
37. Touch inside the hexagon to fill it with stitches
38. Next
39. Set
40. OK
41. Memory
42. Save on the machine
43. Select the Straight Stitch hexagon – It's bigger
44. Edit
45. Copy
46. Move Center

47. Select Center – Select Center – Select Center
48. OK
49. Add
50. IQ Designer
51. Pocket with the arrow pointing out
52. Select the Hexagon – Upper Left
53. OK
54. Line Properties
55. Candlewicking
56. Purple
57. OK
58. Line Bucket
59. Touch the Hexagon to turn it purple
60. Next
61. Size 0.160” up to 0.248”
62. OK
63. Spacing
64. Size 0.040” down to 0.016”
65. OK
66. Set
67. OK
68. Edit – Make sure everything is in the center
69. Select Center - Select Center – Select Center
70. Embroidery

Step 1: Stitch the hexagon through all layers

Step 2: Sew the fancy fill stitch

Step 3: Lay a 20” x 20” border fabric centered on top.

Step 4: Cut away the inner hexagon

Then sew the candlewicking

Step 5: Take out of the hoop

Mark 4” away from all side of the hexagon on the wrong side


Step 6: With right sides together, sew the back to the front, leaving an opening for turning.



IQ Designer Lesson

**Follow along with our videos on
12/13/2021 or 11/1/2022**

Meridian, Altair & Destiny Instructions: Hexagon Table Mat

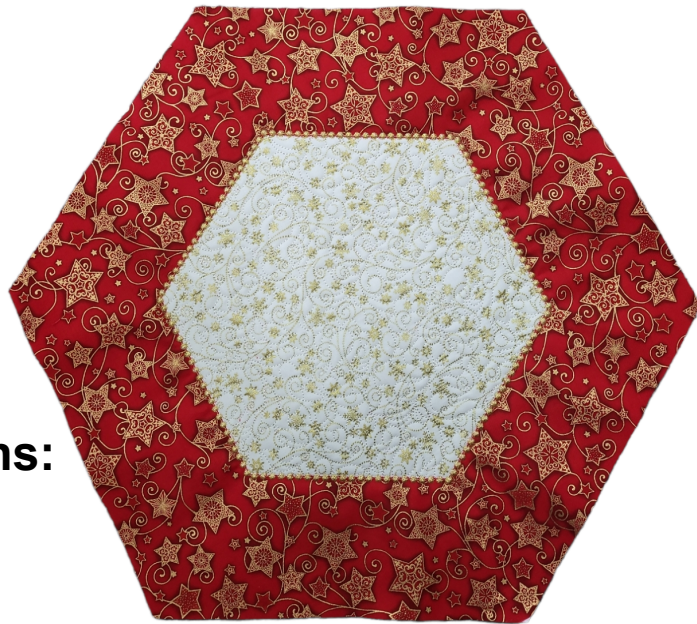

You will need:

- 15" x 15" fabric for center (In kit)
- 22" x WOF" fabric for border (In kit)
- 22" x 22" batting
- 22" x 22" No Show Stabilizer
- Exquisite Thread one shade darker or matching thread

Hooping Order:

- No Show Stabilizer on bottom
- 22" x 22" Cotton batting centered in the hoop
- 15" x 15" Fabric for the center

IQ Designer:

1. Shapes
2. Hexagon
3. OK
4. Size
5. Use the button that keeps it in proportion – 4 Arrows pointing out
6. Size 9.2" x 10.28"
7. OK
8. Line Properties
9. Straight Stitch
10. Green
11. OK

12. Line Bucket
13. Touch the line to turn it green
14. Next
15. Preview
16. Memory pocket with the arrow pointing in
17. Save on the machine
18. Preview
19. Set
20. OK
21. Add
22. IQ Designer
23. Pocket with the arrow pointing out
24. Select the green hexagon
25. Set
26. Line Properties
27. No Sew
28. OK
29. Line Bucket
30. Touch the line to apply the No Sew
31. Fill Properties
32. Circles
33. Select
34. 013
35. OK
36. Red
37. OK
38. Fill Bucket
39. Touch inside the hexagon to fill it with stitches
40. Next
41. Preview
42. Memory pocket with the arrow pointing in
43. Save on machine
44. Preview
45. Set
46. Memory
47. Save on the machine

48. Select the Straight Stitch hexagon – It's bigger
49. Edit
50. Copy
51. Move Center
52. Select Center – Select Center – Select Center
53. OK
54. Add
55. IQ Designer
56. Pocket with the arrow pointing out
57. Machine
58. Select the empty Hexagon
59. Set
60. Line Properties
61. Candlewicking
62. Purple
63. OK
64. Line Bucket
65. Touch the Hexagon to turn it purple
66. Next
67. Size 0.160" up to 0.22"
68. Set
69. Spacing
70. 0.040" down to 0.016"
71. Set
72. Preview
73. Set
74. OK
75. Edit
76. Move
77. Center – Make sure everything is in the center
78. Select Center – Select Center – Select Center
79. OK
80. Embroidery

Step 1: Stitch the hexagon through all layers

Step 2: Sew the fancy fill stitch

Step 3: Lay a 20" x 20" border fabric centered on top.

Step 4: Cut away the inner hexagon

Then sew the candlewicking

Step 5: Take out of the hoop

Mark 4" away from all side of the hexagon on the wrong side

Step 6: With right sides together, sew the back to the front, leaving an opening for turning.