



Wag'nTails




PREPARING YOUR FURNACE FOR WINTER



PREPARING THE FURNACE IN YOUR GROOM VAN FOR WINTER

STEP 1: Check the exhasut

With the furnace **turned OFF** locate the vent cap and exhaust tube plate on the side of the vehicle. **Do not perform this task with the furnace ON as the exhaust opening with be very HOT.**

-  Check around the edges of the plate to make sure it is sealed well to the body of the vehicle. If it not sealed, take it in to be checked out by a service agent.
-  Check inside each opening with a flashlight to inspect for any debris or insects in the openings. Remove any debris and ensure there are no restrictions to either opening.
-  Inspect the exhaust opening (labeled HOT) for any evidence of soot. If there is any evidence of soot, please leave your furnace OFF and take it in to be checked out by a service agent.




STEP 2: Clean and Inspect

With the furnace still **turned OFF** locate the furnace at the rear of the van.

-  Make sure the furnace is properly secured in place. There should not be any movement.



- Remove the two screws securing the rear metal cover of the furnace.
- Vacuum out the chamber in the rear of the furnace to clean out any dander, hair or debris.
- Inspect the chamber for any rust, excessive corrosion, or holes.

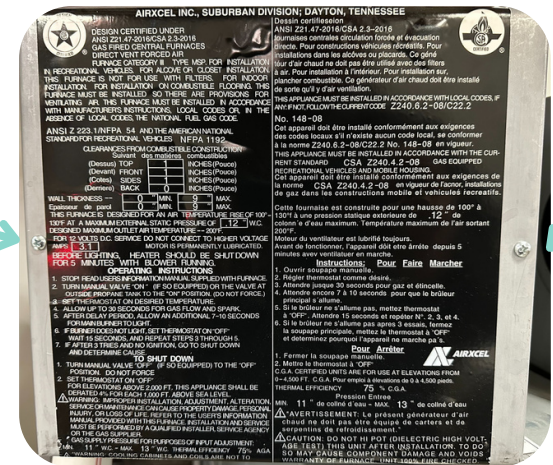

- Light rust can be cleaned with a wire brush and any debris vacuumed out.
- If there is any evidence of more extensive damage to the chamber, please leave your furnace OFF and take it in to be checked out by a service agent.




- Remove the ducting on either side of the furnace by removing the single screw and loosening the metal duct collar.
- It is not necessary to remove the band clamp. Inspect the ducts to ensure there are no holes or tears.
- If a hole or tear is found, it can be remedied by wrapping the duct with metal foil tape.
- Do not force anything, such as sticks or broom handles, into the duct as it may tear.

 Clean out each duct as thoroughly as possible.


 Remove the two round plastic register covers by the tub front inside the salon by unsnapping them.



 Use the K9-II dryer to carefully blow air through the duct from the salon while simultaneously vacuuming out each duct from the rear of the van.

 Once clean, reconnect each duct to the furnace by inserting and rotating the metal duct collar and replacing the screw.

 Reattach the rear plate to the furnace with the two screws.




 Replace the two round plastic register covers by snapping them back in place.


 Vacuum off the rectangular registers.








STEP 3: Check the Thermostat

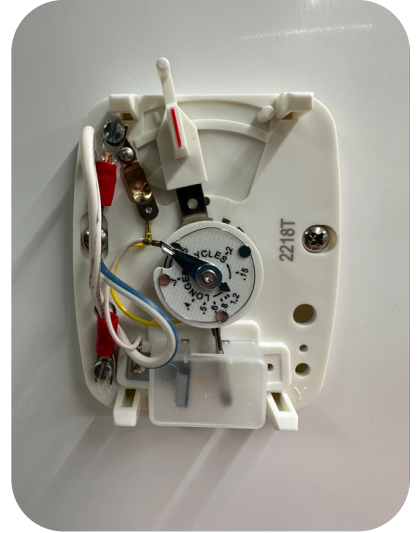With the furnace still **turned OFF** go back inside the salon.

-  Take the cover off of the furnace thermostat.
-  Gently blow any hair, dander or debris from the thermostat.
-  Reattach the cover.



STEP 4: Operate the Furnace

-  Open propane tank service valve or turn on switch.
-  Confirm the battery and propane levels on the Wag'n Tails monitor panel.
-  Turn furnace switch ON
-  Set the furnace thermostat to a temperature higher than the salon temperature.
 -  Your furnace should turn on, if it does not, contact a service agent.

STILL HAVE QUESTIONS?

Give us a call at (800) 513-0304 or email customerservice@wagntails.com.

