



youwipe

**USER MANUAL
DEGAUSSER
DEG-20C**



Introduction

This manual explains the main functions of the YouWipe degausser.

Should you have any questions or suggestions regarding the hardware please contact YouWipe support team at help@youwipe.com for any sales inquiries, please contact us at sales@youwipe.com

Technical specifications

The degausser will destroy all the data from any magnetic storage. It works on all HDD types: 1.8", 2.5" and 3.5", but also data tapes. This model does not work on SSD drives or any other electronic storage.

The degausser will send 2 magnetic pulses, each 20.000 gauss (2 Tesla) through the drive which destroys all the magnetic fields on the drive and therefore also all the data. Each harddrive will be un-useable after this so this is an end of life solution.

Front panel

On the front panel of the degausser you find the start button (1), activity LED's (2), coolingfans (3) USB-B connection for the reports (4), harddrive slot (5), power switch (6) and the power plug (7)





Create report


To create reports you will need software which is running on Windows 7 or 10 and this machine needs to be connected via de USB-B poort (4) on the front side of the degausser.

This machine needs to have either connection to the WipeCenter cloud or a local WipeCenter running on a separate machine.

Software

Status

If you open the software you find there 4 tabs. The first tab shows the status. During the process this image will change and possible errors will be shown here. If the process is successful you will be facting the second tab automatically.

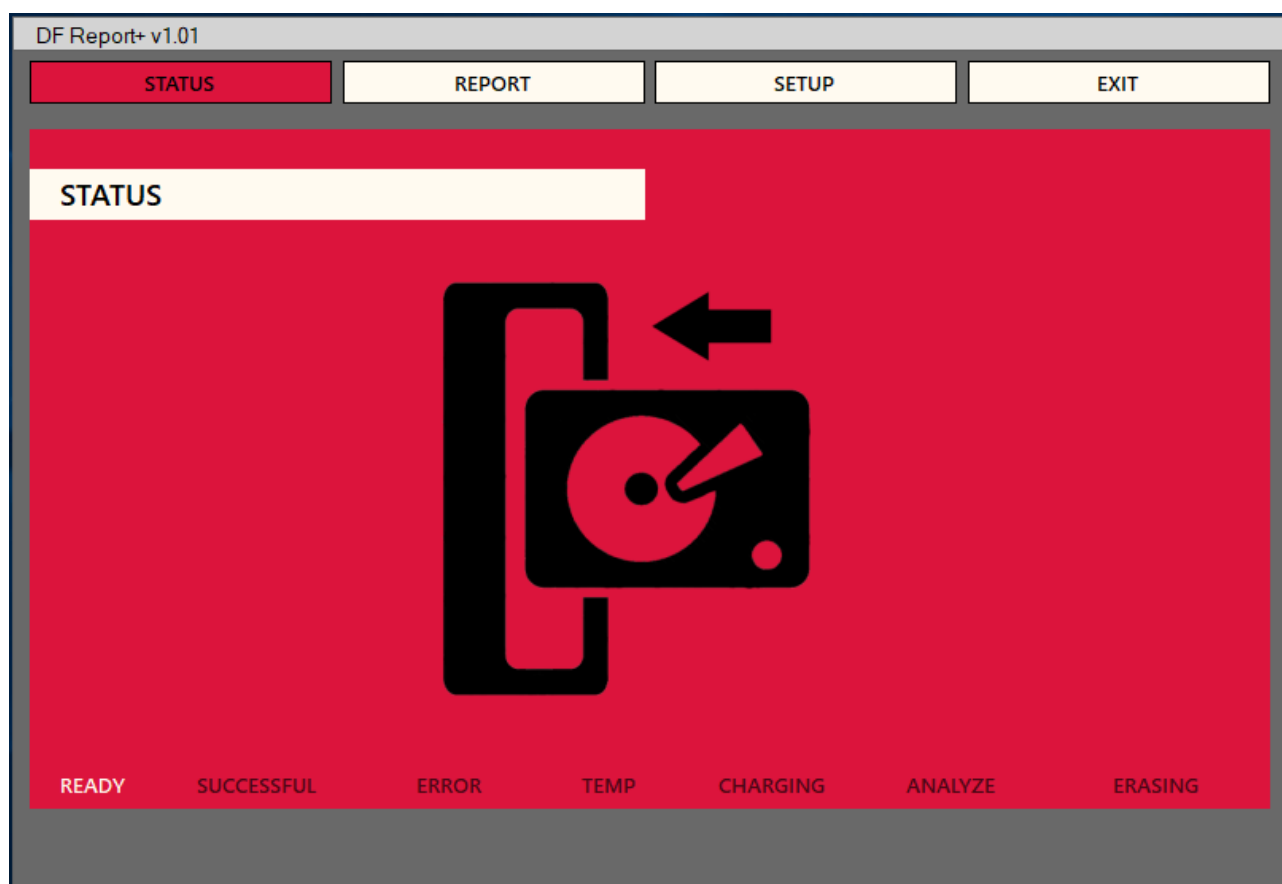



Report

In the report field you can fill in or scan all the needed information about the drive and add some customer reference.

You can select the “M” buttons if you would like memorize the value in that field for the next drive, e.g. you are doing a project with multiple drives you do not need to fill in the customer name, project and user.

Before you are able to send the report you will need to check the box which state that you have supervised the process. After that you can send and save the report via the **SEND & SAVE** button

DF Report+ v1.01

STATUS **REPORT** SETUP EXIT

REPORT

MANUFACTURER	M	SERIAL/BARCODE	
MODEL	M	PROJECT/REF	M
CAPACITY	GB	CUSTOMER NAME	M
FORMFACTOR		USER	M
TECHNOLOGY		12.11.2018 10:04:22	

I hereby confirm that the erasure was supervised and successful executed.

SEND & SAVE DISCARD



Settings

Before you can start with processing drives you will need to set up the connection with the WipeCenter. The field with Degausser serial number will be added by the degausser once you have connect it. If you prefer you can change the default folder for local storage of reports. Please note that all reports will be saved and send.

There are 2 options API setting; you can set it up to local wipecenter, which means a second machine running the WipeCenter software or Cloud WipeCenter. If you change it to cloud the IP and Port will be changed to our default setting. If you use the Local version you will need to add an IP of the host and a port.

The user ID will be created by the YouWipe team. It will be a reference that gives access to the WipeCenter and database to store the reports.

All changes made will be save automatically.

DF Report+ v1.01

STATUS REPORT **SETUP** EXIT

SETUP

LANGUAGE	ENGLISH	API	LOCAL WIPECENTER
DEGAUSSER S/N	SERIAL	IP/HOST	10.10.1.1
INTERFACE	AUTO	PORT	9000
SAVE FOLDER	C:\Users\admin\Desktop\reports	USER/ID	31082c28-c952-4b56-8a2a-73c149d4e1

Exit

Once you hit the exit button the software will be closed. Alle fields in the report field will be empty on restart