




## Installation Instructions for RFID Tags

### Choosing a Proper Headlamp Mounting Location

For optimum performance, the RFID tag must be installed on the headlight lens or other suitable mounting location that is facing the RFID reader during normal driving. In Las Sendas, all RFID Readers will be on the driver's side.

Choose a mounting location for the tag at least 2" from any materials containing metal and approximately 3.5 inches from the bottom reflector.

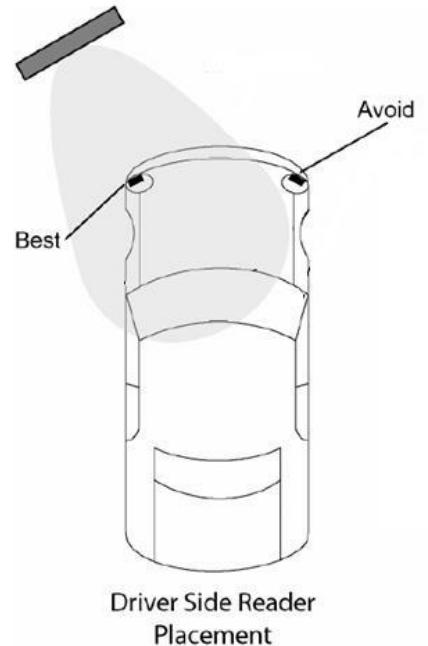

*Clearance Shown for Distance between Hood, Body Panel & Bumper (above)*



*Side View to show Clearance for Distance between Headlamp Reflector Housing (above)*



## Tag Handling & Installation

**Step 1** - Make sure that the *intended mounting surface is clean and free of any contaminants.*


**Note** - Handle the tags with care during installation. Do not excessively bend or distort the tag when removing it from the liner.



**Step 2** - Transfer the tag to the location on the vehicle that you have determined suitable for your application. It is best to apply the tag by the edges as shown in the picture below.



**Step 3** - Smooth out the tag to ensure complete adhesion and remove any air pockets.

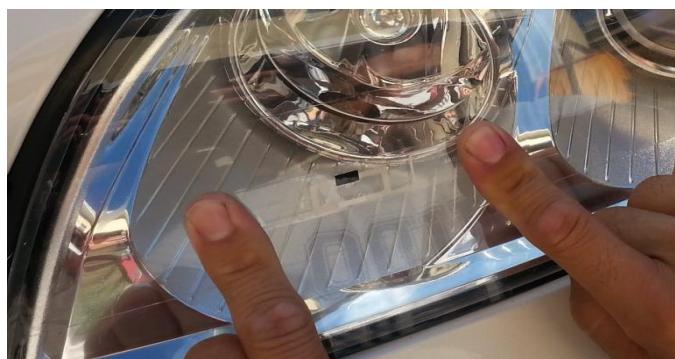

**Note** - Once the tag has been mounted, **do not attempt to remove the tag**, this will damage the tag.





## Alternative Mounting

If mounting to the vehicle's headlamp is not feasible, you may also choose to mount the tag on other **plastic** surfaces, such as the vehicle's bumper, valance or side mirror. Many of the preceding guidelines will still apply and the tag must still be mounted a minimum 2" from any metal structures. This includes any metal structures behind the bumper, such as metal grilles, bumper mounts or the vehicle's frame.

These tags cannot be mounted on windshields.

## Cure Time

Once the tag has been installed on the vehicle, there will be a period of time necessary to allow the tag's adhesive to cure. Due to temperature and humidity variations the total cure time may vary. Most applications will experience an 80% cure of the adhesive within 1 hour and full adhesive cure within 48 hours of application. **Please do not wash the area where the tag is installed or disturb the tag for 48 hours after installation.**

**InfinityRFID, Inc.**  
[www.infinityRFIDInc.com](http://www.infinityRFIDInc.com)



## Other Access Options

Residents can open the vehicle gate using the gate's telephone entry system in response to a call from a guest at the call box. Residents and their guests can also open the gate by using their assigned four-digit entry code.

### **Responding to a Guest Call at the Call Box:**

When a guest finds your name in the Directory and calls your designated phone number, you will have the option to grant access and open the gate, or deny access. When you receive the call, you will be able to speak with the guest and confirm their identity.

- **To grant access and open the gate**, press the **number 9** on your touch tone telephone. If access is granted, the resident will hear a confirmation tone in their handset indicating that the door or gate has opened, then the system will automatically hang up.
- **To deny access** to the guest, **press #** on your touch tone telephone. **Residents should always press the # key on their telephone if they wish to deny a guest access.** If a resident hangs up to deny access instead of pressing #, the telephone entry system will remain on line until its programmed talk time expires or until it detects dial tone.

#### Troubleshooting:

Some newer type telephones emit a short tone rather than a continuous tone when their keys are pressed. This may cause the telephone entry system to not respond to the tone open number. If this happens, simply press the tone open number twice in rapid succession to open the door or gate.

### **Using an Entry Code:**

**Four-digit entry codes** provide a means for a resident to gain access by entering their assigned four-digit code on the telephone entry system keypad.

1. To use entry codes, first press # and then enter the four-digit entry code
2. The system will emit a tone (beep) and the LCD display will show OPEN when a valid code is entered on the keypad.

**Residents should keep their unique code secret.** Telling other persons their code or allowing other persons to use their code compromises security and defeats the purpose of the system.

If you need to change your unique code, please complete and return a [Resident Information Gate Form](#) to Management.